

FARBERWARE®



FGSB1500W

Professional Garment Steamer With Stand

Instruction Manual

CONTENTS

SAFETY.	2
IMPORTANT SAFEGUARDS	3
ADDITIONAL IMPORTANT SAFEGUARDS	3
INTRODUCTION	6
PARTS & ASSEMBLY	7
HOW TO OPERATE.	10
CLEANING & MAINTENANCE	10
RETURNS & WARRANTY	11

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can cause serious injury to you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

120 Volts, 60 Hertz

Rated Output: 1500 Watts

THIS PRODUCT IS FOR USE IN 120V AC OUTLET ONLY.



IMPORTANT SAFEGUARDS

A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance.

When using electrical appliances, basic safety precautions should always be followed, including:

1. **Read all instructions before operating this appliance.**
2. DO NOT TOUCH the hot surfaces. Use handles or knobs.
3. This appliance is NOT A TOY.
4. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
5. Close supervision is necessary when any appliance is used by or near children.
6. To protect against electrical shock do not immerse cord, plug or any part of this appliance in water or other liquids.
7. Unplug from outlet when not in use, before removing parts and before cleaning. Allow to cool before putting on or taking off any parts, and before cleaning.
8. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination, repair or adjustment.
9. The manufacturer does not recommend the use of accessory attachments other than what is provided by the manufacturer. Use of attachments may cause injuries.
10. DO NOT use the appliance for other than its intended use.
11. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
12. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
13. DO NOT let cord hang over edge of table or counter, or touch hot surfaces.
14. NEVER leave unit unattended while in use or when plugged into an outlet.
15. Extreme caution must be used when moving an appliance containing hot food.
16. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

ADDITIONAL IMPORTANT SAFEGUARDS

Operating Safety Precautions

1. In case the thermostat damages or fails, the hot fuse of protective device gives protection by cutting off the power supply of machine body when the machine reaches a certain temperature.
2. **WARNING:** Do not eject the steam directly towards people or animals, or scald may be caused.
3. Only use the detachable accessories when there is no steam and they are cooled down to avoid scalds.
4. Conduct the installation in accordance with the instructions. Do not dismantle without authorization.

5. The liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.
6. Do not operate the machine unless you read this manual thoroughly. The machine can only be used indoors.
7. The machine can only be used for the purposes described in this manual. Utilization for other purposes is prohibited.
8. The water for the machine shall be domestic potable water to avoid contaminating the textiles. Purified water is recommended.
9. Make sure the working voltage of the machine accords with your domestic supply voltage and the machine is connected to power supply mounted with 30mA creepage protection switch. Only the firmly grounded 3-pole socket is applicable for the machine. The rated current shall be not less than 15A.
10. Thoroughly stretch the power cords before use. Avoid sharing the same power supply with other high-power electric appliances. Do not use wiring board in order to prevent fires arising from the wiring board overloaded.
11. Before operation, connect all the necessary ironing or cleaning accessories, fill the outer tank to full and then turn on the power supply switch.
12. Thoroughly stretch the expansion link to ensure that the steam hose is unobstructed and untwisted and other functions perform well.
13. The machine shall be put on a flat and stable place.
14. Do not fill hot water in the tank, or the tank would deform. Fill water before operation and observe the water level from time to time. Add water to proper volume in case it is below the designed water level.
15. Do not directly put the machine under water tap to fill water.
16. Do not fill solutions such as detergent into the tank.
17. Keep power cords and steam pipes from metals or other heating elements.
18. Do not leave the machine operating without attention.
19. The machine shall not be operated by these people (including children): the physically, tactilely or mentally disabled or those who lack of experience and knowledge, unless they are supervised or guided by someone who is responsible for their safety in respect of the application of the machine.
20. Children shall be monitored to be prevented from playing with the machine.
21. During operation, keep the ironing brush away from people, animal or domestic electric appliance. When the machine is not in use, turn off the steam jet switch and put the ironing brush on the support to avoid steam hurting people or damage things.
22. During operation, do not touch the steam jet outlet and steam conduit of the ironing brush or drag the power cords.
23. Do not put on floor or distort the steam conduit, or accidents may be caused by the steam jammed in the steam conduit when it is squeezed.
24. Do not drag the steam conduit by force or to move the machine, or the steam conduit may be damaged or steam may leak.
25. Do not pull out or plug in the steam conduit when the machine is still hot but only when the machine is cooled down, thus to avoid scald.
26. If the ironing brush falls, has visible damage or is leaking, stop using it.

27. To avoid scald by steam, after operation, turn off the power supply, pull out the plug and, when the machine is cooled down, pour out the remnant water, and then have the machine packed and stored. However, let the machine air dried before packing and storage. Do not pull put the plug by dragging the power cord.
28. Use dry soft cloth and neutral detergent to clean the machine surface and do not use solvents such as gasoline, alcohol, banana oil, etc. Prevent liquids penetrating into the machine.
29. Do not soak the machine, power cord or plug in water or other solutions. Do not keep the machine in places which are damp, exposed or of corrosive gases.
30. Keep the machine away from flammable or explosive objects.
31. Please clean the filter sieve at regular intervals to keep it available. The machine shall be cleaned or maintained from time to time (every 1 month or 20L water is consumed). (See the following sections for the cleaning and maintenance)
32. Push the support pole to move the machine. Do not move the machine by force when it is tough to be moved. Discharge the water before checking the wheels. Turn off the power supply and pull out the plug before moving the machine.
33. Turn off the power supply and pull out the plug before discharging water from or filling water in the tank. Avoid water leakage. Do not open or take down the tank in use.
34. If find any damage on the accessories especially the safe protection and power cord, stop using the machine and inform our professional personnel of service center for repair. Do not repair at your own discretion.
35. Before cleaning or repairing the machine, turn off the power supply, pull out the plug, release the pressure inside the heating element of the base and let the machine cool down.

Instructions for the Electrical Cord and Plug

1. ELECTRICAL SHOCK HAZARD: Failure to follow these instructions can result in death, fire, or electrical shock.
 - Plug into a grounded 3 prong outlet.
 - DO NOT remove ground prong.
 - DO NOT use an adapter.
 - DO NOT use an extension cord.
2. This unit **MUST** be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This unit is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.
3. **WARNING:** Improper use of the grounding plug can result in a risk of electric shock. **If the plug does not fit fully into the outlet, contact a qualified electrician. Do not attempt to modify the plug in any way.**
4. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
5. The manufacturer does not recommend using this machine in countries that do not support 120V AC even if a voltage adapter, transformer, or converter is in use.

SAVE THESE INSTRUCTIONS!

INTRODUCTION

Thank you for purchasing the PROFESSIONAL GARMENT STEAMER WITH HANGER from Farberware! With 1500 watts of steaming power, this garment steamer generates super-heated steam to remove tough wrinkles from any garments effectively.

Features include:

- This full-size clothing steamer is integrated with 2L water capacity with anti spill cap ensures no leaking during fill-ups
- Brings continuous high-temperature steam in just 50 seconds to steam away wrinkles while freshening fabrics
- 30g/min steam rate
- Built-in hanger for steaming clothes
- Removable steam brush included
- 60 minutes of continuous steam
- Display screen with nine levels of steam options

PARTS & ASSEMBLY

Your PROFESSIONAL GARMENT STEAMER WITH HANGER comes partly assembled. Before using, remove all packing materials from the box. Check the steamer for any damage. If there is any damage, DO NOT operate the steamer. Return damaged items to the store where it was purchased.

PARTS

Steam Nozzle With Fabric Brush

Multifunctional Hanger

Support Bars

Steam Hose

Steam Hose Connector

Water Tank

 
Display Screen

Base




DISPLAY SCREEN

1. Chiffon
2. Silk
3. Fiber
4. Nylon
5. Polyester
6. Cashmere
7. Wool
8. Cotton
9. Linen

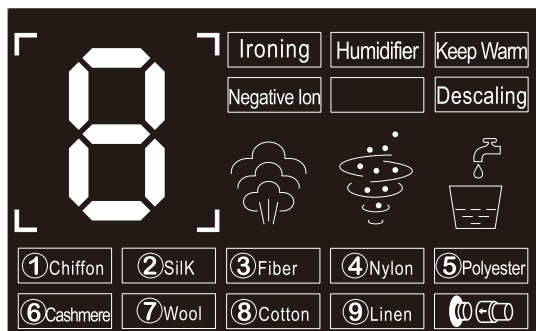

Stand-By Mode:

 Press the power ON-OFF button (button above MODE button), the buzzer will make a "beep" sound and the power indicator, mode indicator as well as setting will light; when no Steam House is detected by the Steam House Sensor, "Ironing" symbol will blink (the default mode if ironing, and on the 9th setting), and the machine is in Standby Mode without heating. The buzzer makes a "beep" sound every five seconds and stops after sounding for 10 times. The "Ironing" and "Humidifier" Modes can be cyclically selected by touching the "Mode" button ("Ironing" or "Humidifying" symbol will blink); the setting can be cyclically selected from 1-9 by touching "Level" button under the "Ironing" Mode, and the buzzer prompts with "beep"; the settings cannot be selected under the "Humidifier" Mode, but only with prompt of "beep". If the Steam Hose is not detached after 2 minutes, the machine will automatically shut down and enter into the Power-Up mode.



Stand-by Mode (Ironing Mode)



Stand-by Mode (Humidifier Mode)

Working-Mode

When the machine is under "Ironing" Mode, and Steam Hose is installed well, "Ironing" symbol is on, and for the machine, its original setting is the 9th level (Maximum), the "Linen" symbol is on, the screen shows a "9". Touch the "Level" button to change the settings. After heating for 50 seconds, steam symbol will lightly cyclically, the steam symbol appears, then press Mode button to select "Humidifier". Mode and Steam Hose is installed well the "Humidifier" symbol on, as well as "Negative Ion" symbol. Then the machine will perform humidify function at a power of 250W.



Working Mode (Ironing Mode)



Working Mode (Humidifier Mode)

INSTALLATION

Hose Assembly: (Figure 1)

- Connect the Steam Hose with the Steam Hose Connector and lock into place.

Support Bars & Multifunctional Hanger: (Figure 2-5)

- Insert the Support Bars into the Multifunctional Hanger and lock into place. **NOTE:** When disassembling the Multifunctional Hanger, press the triggers on both sides on the Support Bars and then pull out.
- Place the Support Bars into the holes on the main unit base. The power cords face the water tank. **NOTE:** When disassembling the Support Bars, press the buttons at both sides on the main body to unlock poles.

Accessory Instructions:

- Hang the Steam Nozzle on the Multifunctional Hanger with hooks on both sides of the rack.
- After done using the Steamer, the power cord can be wrapped around the Support Pole Hangers for convenient power cord storage.(Figure 4)
- The fabric brush can be placed onto the Steam Nozzle for tough to get stains/wrinkles. **CAUTION:** Do not assemble while unit is running or you may burn yourself. Wait until unit is unplugged and cool.

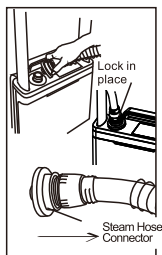 


Figure 1

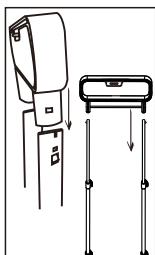 


Figure 2

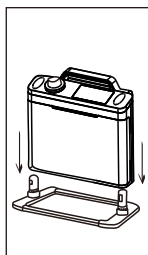 


Figure 3

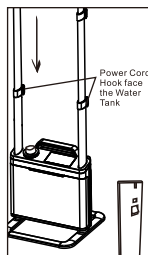 


Figure 4


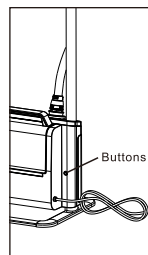 


Figure 5

FILLING WITH WATER

 - To add water, remove the water tank from the base and unscrew the Water Tank Cap. Fill with water and screw the cap back on and firmly place the water tank back on the base.

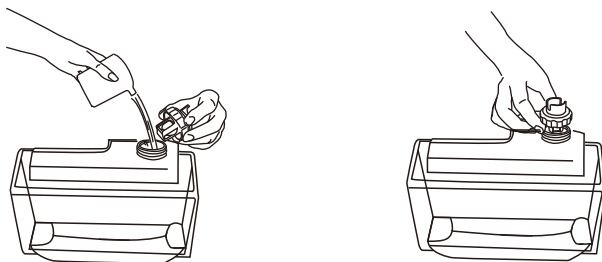

HOW TO OPERATE

- Place steamer on a flat, level surface. Do not block vents on bottom of unit.
- Plug in cord and select your desired setting on the screen display. Wait for the steam to come out to start using - it will take approximately 50 seconds. **NOTE:** Steamer will run for 60 minutes.
- Put garment onto the hanger head. Grasp the steam head with the steam vents pointing away from you. Start steaming by touching material lightly with steaming head and moving in an up/down vertical motion. Begin at the bottom of the garment and move in an upward direction. Steam with hose in an upright position. If steaming in a low position near floor, straighten hose up and out frequently to keep clear of condensation.

NOTE: During operation, the steamer hose may make a gurgling noise. This is a normal result of condensation. If it begins to gurgle, extend hose up and out to move excess moisture back into the base.

CLEANING & MAINTENANCE

HELPFUL TIPS

- Check the fabrics label for recommendations on care. Test fabric for color fastness on an unobtrusive part of the garment (inner seam) before steaming.
- Do not touch silk or velvet with steam head. Some articles can be steamed better from the underside.
- If steaming in a low position near floor, straighten hose up and out frequently to keep clear condensation. If hose becomes clogged, it will make a gurgling noise.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

PROFESSIONAL GARMENT STEAMER WITH STAND/ FGSB1500W

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 9:00 AM and 4:00 PM, Monday through Friday, Central Standard Time.

Distributed by:


Nostalgia Products LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685
Customer Service
Phone: 844-918-0509
Email: CustomerService@emllc-USA.com

One-Year Limited Warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only expressed warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. This warranty is valid for the original retail purchaser or gift recipient from the date of initial retail purchase and is not transferable.

Keep your original sales receipt as proof of purchase is required to make a warranty claim.

IMPORTANT: This warranty does not cover damages resulting from use not in conformity with the printed directions, accident, misuse or abuse, alternation, the  xing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. (Read directions carefully.) This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz).

Englewood Marketing LLC excludes all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim or if service is required, please call our CUSTOMER SERVICE NUMBER.

For faster service, please have the model, type, and series numbers ready for the operator to assist you.

Customer Service Number
Englewood Marketing LLC
In the US 844-918-0509
Email: CustomerService@emllc-USA.com

This warranty does not apply to re-manufactured merchandise.

Please read the operating instructions carefully. Failure to comply with the operating instructions will void this warranty.

FARBERWARE®

Farberware is a registered trademark of Farberware Licensing Company, LLC
Manufactured and sold pursuant to a license from Farberware Licensing Company,
LLC © 2021 Farberware Licensing Company, LLC. All rights reserved.

(rev. 03/26/21 SH)