



All products are trademarks of Nostalgia Products Group, LLC.
Worldwide design & utility patented or patents pending.
© 2013 Nostalgia Products Group, LLC.

www.nostalgiaelectrics.com

(rev. 07/19/13)



RHD800
PLATINUM

Platinum Series™ Hot Dog Roller

Instructions and Recipes



CONTENTS

IMPORTANT PRECAUTIONS	3
IMPORTANT SAFEGUARDS	3
INTRODUCTION	4
PARTS & ASSEMBLY	5
HOW TO OPERATE	6
HELPFUL TIPS	6
CLEANING & MAINTENANCE	7
RECIPES	7
RETURNS & WARRANTY	8

SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

120 Volts, 60 Hertz
280 Watts, 2.33 Amps

IMPORTANT PRECAUTIONS

1. NEVER immerse base in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth on the Canopy or Base.
4. NEVER use a scouring pad on the appliance.
5. NEVER leave appliance unattended while in use.
6. NEVER place anything other than what is being cooked on the appliance.
7. Unplug unit from outlet when not in use and during cleaning.
8. DO NOT operate this appliance with a damaged cord or plug, nor if the appliance ever malfunctions.
9. DO NOT place Base in a dishwasher.
10. Always keep Drip Tray in place while cooking hot dogs.
11. Keep out of reach of children.
12. This appliance is NOT A TOY.
13. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
14. Young children should be supervised while in proximity of the appliance to ensure that they do not play with it.

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. Read all instructions before operating this appliance.
2. Avoid contact with moving parts.
3. To protect against electrical shock do not immerse cord, plug or any part of this appliance in water or other liquids.
4. Close supervision is necessary when any appliance is used near children.
5. Unplug from outlet when not in use, before removing parts and before cleaning.
6. DO NOT operate any appliance with a damaged cord or plug, nor if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair.
7. The manufacturer does not recommend the use of accessory attachments. Use of accessory attachments may cause injuries.
8. DO NOT use outdoors.
9. Position the appliance as close to the outlet as possible to prevent injury due to tripping over cord.
10. DO NOT place on or near a hot gas or electric burner, nor in a heated oven.
11. Extreme caution must be used when moving this appliance.

12. DO NOT use the appliance for other than its intended use.
13. An appliance that is plugged into an outlet should not be left unattended while in operation.
14. Check Stainless Steel Rollers for presence of foreign objects prior to use.
15. Make sure the Stainless Steel Rollers are properly inserted into Base prior to using.
16. DO NOT attempt to place Stainless Steel Rollers on Base or remove from Base while motor is on.
17. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
18. Longer detachable power supply cords can be used if care is exercised in their use.
19. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
20. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
21. **Save these instructions!**

INTRODUCTION


The PLATINUM SERIES™ HOT DOG ROLLER turns a classic All-American food into a classy treat! A fun way for guests of all ages to enjoy delicious hot dogs, this unit holds up to eight regular-sized hot dogs or four foot-long hot dogs at one time. Featuring a convenient bun storage warmer in the Canopy Top, it's a great all-in-one solution to enjoy hot dogs anytime!

PARTS & ASSEMBLY

ASSEMBLY

Your HOT DOG ROLLER requires very little assembly.

- Simply place Stainless Steel Rollers in the Base of the unit, making sure the pin fits correctly into the hole on the left hand side of the Base interior. **DO NOT** force the pin into the receptacle or it will strip and then Rollers will not work properly.
- Fit the four Canopy Poles into the holes in each corner of the Base.
- Insert the Drip Tray into the slot at the back of the unit.
- Attach the Canopy Top to the Canopy Poles.

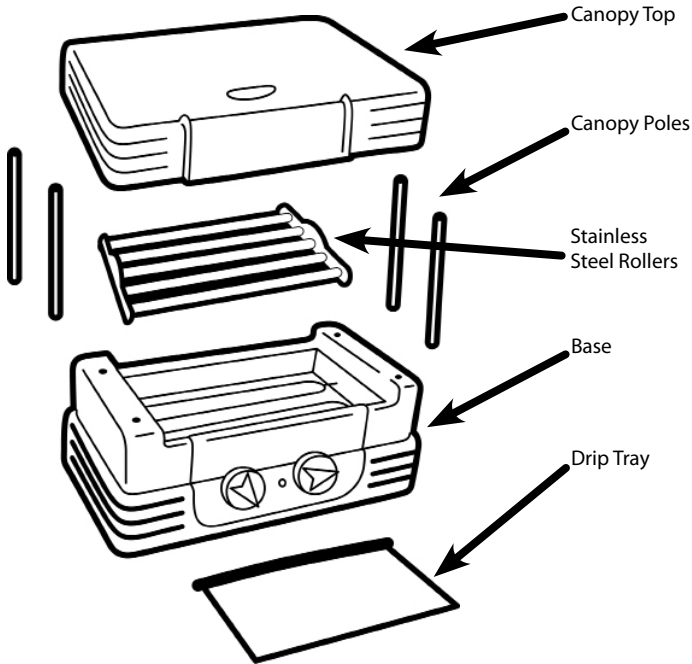

DIAL POSITIONS

Left: Heat / Right: Power



HOW TO OPERATE

- Place the HOT DOG ROLLER on a stable surface near an electrical outlet before starting.
- Stainless Steel Rollers must be correctly inserted in order to operate properly. Also make sure that the Drip Tray is in place.
- Always make sure that the cord is away from any water source. It is acceptable to use an extension cord if necessary.
- The dial on the right of The HOT DOG ROLLER turns on the power. Turn to the ON position. The red power indicator light should come on.
- The dial on the left regulates the heating temperature, from MIN to MAX. Turn to MAX. Let the unit warm up for 3 minutes or so.
- Once the appliance has finished heating, place the hot dogs on the Stainless Steel Rollers (evenly spaced). Up to eight regular-sized hot dogs or 12 breakfast sausage links can be cooked at one time.
- The hot dogs will begin to roll. They will continue to roll at approximately two cycles per minute.
- As the hot dogs cook, they will begin to darken in color. The hot dogs should be cooked for 15 - 20 minutes depending on the type and size of hot dog. The thicker the hot dog, the longer it will take to cook through.
- After they have fully cooked, turn the heater knob down to a medium heat so that the hot dogs stay warm and continue rolling prior to serving.
- After the cooked hot dogs are removed from the Stainless Steel Rollers, they can be replaced with new hot dogs to cook if desired. Remember to readjust the temperature to MAX when putting on new hot dogs.

By following these simple instructions, your PLATINUM SERIES™ HOT DOG ROLLER will be fun for friends, family and kids of all ages!

HELPFUL TIPS

POWER LIGHT

If the red power indicator light does not come on after turning the dial to the ON position, check the electrical plug to make sure it is fully plugged into outlet.

ROLLERS

If the Stainless Steel Rollers are not turning, make sure the power light is on and the unit is fully plugged into outlet. Turn unit off and on again. Make sure the end roller pin is correctly inserted into the Base.

Sometimes hot dogs are square in shape which prevents them from rolling properly. Rotate the hot dogs, using tongs, on the Stainless Steel Rollers until they begin to plump from cooking. They will eventually even out in shape and automatically move on the rollers.

HEATING

If hot dogs are cooking unevenly, move the hot dogs from one side of the Stainless Steel Rollers to the other.

CLEANING & MAINTENANCE

Make sure the unit is unplugged before cleaning. Allow all parts to COOL to the touch, especially the Stainless Steel Rollers and Drip Tray.

Before first use and continuing after each use, be sure to wipe off the Stainless Steel Rollers with a damp cloth and dry thoroughly. When more concentrated cleaning is necessary, wash in warm soapy water, rinse, and dry thoroughly.

To prolong the life of your HOT DOG ROLLER, hand-washing parts is advised. Dishwasher use is not recommended. Never place the Base in a dishwasher.

RECIPES

Use a variety food items with your HOT DOG ROLLER for a quick, easy-to-serve meal:

- A Variety of Regular-Sized Hot Dogs and Wieners (Beef, Turkey, Veggie, or Chicken)
- Foot-Long Hot Dogs
- Sausage Links

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IS DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

PLATINUM SERIES™ HOT DOG ROLLER / RHD800PLATINUM

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685
Customer Service
Phone: (920) 347-9122
Web: www.nostalgielectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgielectrics.com and fill out the Customer Service Inquiry form and click the Submit button.

A representative will contact you as soon as possible.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgielectrics.com.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

For more information, visit us online at www.nostalgielectrics.com.

Like us on Facebook at www.facebook.com/NostalgiaElectrics.

Follow our boards on Pinterest at www.pinterest.com/nostalgielectrx.

Tweet along with us on Twitter at www.twitter.com/NostalgiaElctrx.