



All products are trademarks of Nostalgia Products Group, LLC.
Worldwide design & utility patented or patents pending.
© 2013 Nostalgia Products Group, LLC.

www.nostalgiaelectrics.com

(rev. 5/21/13)



PP0900

Pizza Party & Appetizer Oven

Instructions and Recipes

Make every day a party!
Visit www.nostalgielectrics.com for more fun products.

CONTENTS

IMPORTANT PRECAUTIONS	3
IMPORTANT SAFEGUARDS	3
INTRODUCTION	4
PARTS & ASSEMBLY	5
HOW TO OPERATE	6
HELPFUL TIPS	7
CLEANING & MAINTENANCE	7
RECIPES	8
RETURNS & WARRANTY	9

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

120 Volts, 60 Hz, 1100 Watts, ETL Approved

THIS PRODUCT IS FOR USE IN 120V AC OUTLET ONLY.

IMPORTANT PRECAUTIONS

1. NEVER immerse appliance or cord in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth on the appliance.
4. NEVER leave appliance unattended while in use.
5. NEVER place anything other than what is intended to be cooked in the appliance.
6. Unplug appliance from outlet when not in use and when cleaning.
7. DO NOT place appliance in dishwasher.
8. Keep out of reach of children.
9. This appliance is NOT A TOY.
10. This appliance is not intended for use by young children or the cognitively challenged without supervision.
11. Young children should be supervised to ensure that they do not play with the appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

1. **Read all instructions before operating this appliance.**
2. DO NOT touch hot surfaces.
3. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
4. To protect against risk of electrical shock, do not immerse cord, plugs or appliance in water or any other liquid.
5. To avoid fire or shock hazard, or damage to the unit, this unit should be plugged into a polarized 120 Volt AC outlet ONLY.
6. DO NOT operate any appliance with a damaged cord or plug, after the appliance malfunctions, or if it is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, or to a repair shop for electrical or mechanical adjustment.
7. The appliance manufacturer does not recommend the use of accessory attachments other than what is supplied with the unit. They may cause injuries.
8. Close supervision is necessary when any appliance is used by or near children.
9. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
10. DO NOT overload wall outlet, extension cords, or integral convenience receptacles, as this can result in a risk of fire or electric shock.
11. This appliance should not be used for purposes other than stated in the instructions accompanying this appliance.
12. DO NOT leave unit unattended while in use or when plugged into an outlet.
13. DO NOT place paper, cardboard, plastic or any similar material inside or on top of the unit.

14. DO NOT touch the Lid or Base while in operation. Use oven mitts or pot holders.
15. DO NOT heat or cook meat or burgers in the appliance. The grease could cause a fire.
16. Unplug from outlet when not in use and before removing parts for cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
17. Ensure the Lid is properly placed on the Base before cooking. DO NOT use if Lid is cracked or broken.
18. Allow for a minimum of 2 feet of space between oven sides and top during cooking.
19. A short power-supply cord or detachable power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Do not let cord hang over edge of table or touch hot surfaces.
20. Always plug cord into wall outlet before operation. There is no on/off switch. To turn off, remove plug from wall outlet. Allow unit to cool completely before putting away.
21. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. Exception: An extension cord or longer detachable cord is not recommended for use with this appliance.
22. If a long detachable power-supply cord or extension cord is used: 1) The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance; 2) If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord; and 3) The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.
23. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. **If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.**
24. Extreme caution should be used when moving an appliance with hot food.
25. Do not attempt to service this appliance yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
26. Food will be very hot. Use a plastic or wooden kitchen utensil to carefully scoop them out.
27. Extreme caution must be used when opening and closing the Lid on this unit. Use an oven mitt or pot holder when opening and closing the Lid for safety.

SAVE THESE INSTRUCTIONS!

INTRODUCTION



Thank you for purchasing the PIZZA PARTY & APPETIZER OVEN from Nostalgia Electrics™! Turn dinner time into party time with this fun and easy to use tabletop appliance. It has the capacity to cook four individual pizzas or small appetizers at a time. Use your favorite ingredients to create mini pizzas, quiche, savory tarts and more. You may also cook frozen store-bought snacks and appetizers. The dual heating elements ensure fast, even cooking, and the nonstick surface makes cleanup a snap. Invite friends and family to cook and serve their own appetizers using the included color-coded spatulas. With the PIZZA PARTY & APPETIZER OVEN, cooking has never been more fun!

PARTS & ASSEMBLY

Your PIZZA PARTY & APPETIZER OVEN comes fully assembled. Before first use, discard all packing materials. Wipe down the outside of the unit and the Lower Cooking Plate with a damp, non-abrasive cloth. Dry completely with a soft, non-abrasive cloth.

Wash the four included spatulas in warm, soapy water with a soft, non-abrasive cloth or sponge. Dry thoroughly.

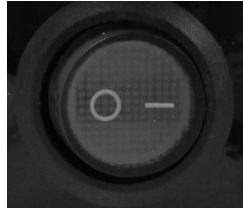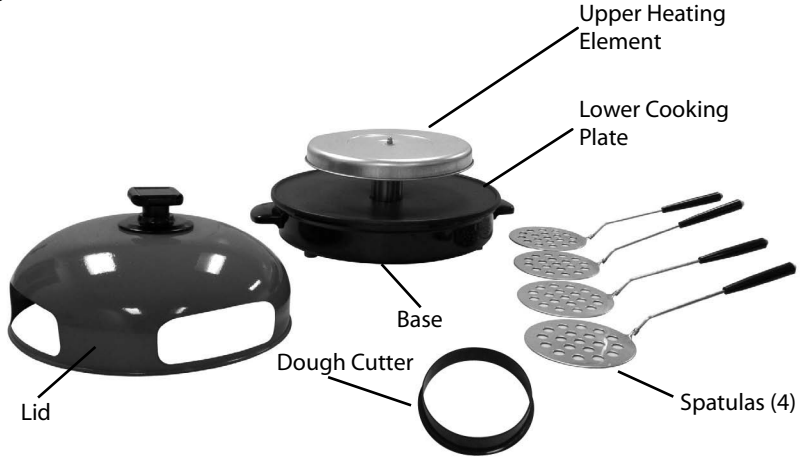


Parts



Switch Positions

"O" = ON / "-" = OFF

HOW TO OPERATE

1. Before first use, wipe down all surfaces with a dry, non-abrasive cloth.
2. Find a dry, heat-resistant, level surface near an electrical outlet. Allow for a minimum of 2 feet of space around all sides and the top of the oven.
 DO NOT place the appliance on a plastic table or plastic table cloth.
3. Place the Lid over the Lower Cooking Plate and plug the unit into an electrical outlet.
4. Turn the red switch on the back of the unit to the ON position. Allow the unit to preheat. Once preheated, the PIZZA PARTY & APPETIZER OVEN will maintain a heat between 350 and 450 degrees F.
5. While the appliance is preheating, you may prepare your ingredients.
6. If making pizzas, use the included Dough Cutter to cut the pizza dough.
7. Assemble your pizzas right on top of the included Spatulas so they are ready to place in the oven. To prevent dough from sticking, spray or apply a light coat of vegetable oil to the top surface of the Spatula. (Refer to the Helpful Tips section for further instructions on making mini pizzas.)
8. Use the Spatulas to carefully place food through the slots in the Lid and onto the Lower Cooking Plate. Leave the food on the Spatula while cooking. DO NOT cook food directly on the Lower Cooking Plate.
 The Base of the appliance, Upper Heating Element and Lid get VERY HOT. DO NOT touch hot surfaces.
9. The cooking time will range between 8-10 minutes for pizza and 15-20 minutes for frozen appetizers.
10. Throughout the cooking process, you may use the Spatulas to check whether food is cooked. Be sure to handle the Spatula by the black, heat-resistant end. DO NOT touch the metal as it will be HOT.
 NEVER remove the Lid during cooking. Be sure the unit is COMPLETELY COOLED before removing the Lid.
11. Take the Spatula out of the unit and place on a heat-resistant plate or surface. Slide the food off and allow to cool.
12. As soon as you are finished cooking, turn the unit OFF, unplug appliance and allow to cool.
13. Once the appliance is cool, follow the directions in the Cleaning and Maintenance section to clean your PIZZA PARTY & APPETIZER OVEN.

HELPFUL TIPS



NEVER leave the unit unattended while operating.

Smoking

During first use, you may notice slight smoking or a slight odor; this is normal with most new appliances. The smoking and odor is caused by the residues burning off the nonstick Cooking Plates and the Heating Element. Allow the appliance to preheat until smoke and odor no longer exists.

Making Pizzas

Follow these steps to create delicious, perfectly baked mini pizzas:

1. Gather your ingredients:
 - Pizza dough
 - Pizza sauce
 - Cheese
 - Toppings
2. Assemble your pizzas:
 - Using the supplied Dough Cutter, cut the pizza dough into individual servings.
 - Place a Spatula on top of a heat-resistant plate.
 - Spray or apply a light coat of vegetable oil to the top surface of the Spatula.
 - Place pre-cut dough on Spatula.
 - Add sauce and your ingredients. (Do not stack toppings higher than 1 inch.)
3. Cook your pizza:
 - Place the Spatula with pizza on it into one of the four slots in the Lid of the oven.
 - Allow to cook for 8-10 minutes, or until crust is golden brown and cheese is melted.
 - Remove the Spatula from the PIZZA PARTY & APPETIZER OVEN and place on a heat-resistant plate. Slide the pizza off the Spatula and allow to cool.

Pizza Dough

If dough is too sticky, add more flour. Always make sure that you knead and roll out dough on a well-floured surface. For thin crust, roll the dough on one side, sprinkle with flour, then turn it over and roll again. Repeat if necessary. The dough should be approximately $\frac{1}{8}$ " in thickness.

CLEANING & MAINTENANCE

- Make sure the appliance is COMPLETELY COOL before cleaning. NEVER immerse PIZZA PARTY & APPETIZER OVEN in water or any other liquid.
- Turn the appliance OFF and disconnect from the electrical outlet by unplugging the appliance.
- Hand wash the Lid, Spatulas and Dough Cutter in warm, soapy water using a non-abrasive cloth. Rinse and dry with a non-abrasive cloth or towel.
- Wipe the Cooking Plate and exterior of the Base with a dry, non-abrasive cloth.
- NEVER use scouring pads or abrasive cleaners on this unit as it will damage the surface and parts.
- DO NOT put any parts in the dishwasher.

RECIPES

With the PIZZA PARTY & APPETIZER OVEN you can bake fresh or frozen mini pizzas and other snacks without turning on an oven! Follow these recipes for delicious homemade appetizers, or save time and use store-bought pizza dough or frozen foods.

The four cooking slots and Spatulas allow friends and family to join in on the fun. Set out a variety of ingredients so you may all customize mini pizzas and other appetizers. Simply place the food on the color-coded Spatulas, insert into the oven and enjoy!

PIZZA DOUGH

- 3½ to 4 Cups Bread or All-Purpose Flour
- 1 Tsp. Sugar
- 1 Envelope Instant Dry Yeast
- 2 Tsp. Kosher Salt
- 1½ Cups Water, 110 degrees F
- 2 Tbsp. Olive Oil, plus 2 Tsp.

Use a hand mixer to combine the flour, sugar, yeast and kosher salt in a medium bowl. While the mixer is running, add the water and 2 tablespoons of the oil and beat until the dough forms into a ball. (If the dough is sticky, add additional flour, 1 tablespoon at a time, until the dough comes together in a solid ball. If the dough is too dry, add additional water, 1 tablespoon at a time.)

Scrape the dough onto a lightly floured surface and gently knead into a smooth, firm ball.

Use the remaining 2 teaspoons of olive oil to grease a large bowl. Add the dough and cover the bowl with plastic wrap. Place in a warm area until it doubles in size (about 1 hour).

Turn the dough out onto a lightly floured surface and divide it into 2 equal pieces. Cover each with a clean kitchen towel or plastic wrap and let them rest for 10 minutes.

Flatten the dough and cut into 4-inch diameter rounds.

PIZZA MARGHERITA

- Homemad or Store-Bought Refrigerated Pizza Dough
- 1 Cup Pizza Sauce
- 10 Slices Fresh Mozzarella Cheese
- 10 Fresh Basil Leaves
- Olive Oil
- Sea Salt, to taste

Cut pizza dough into 4-inch rounds, assemble toppings and cook as directed.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

PIZZA PARTY & APPETIZER OVEN / PPO900

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685
Customer Service
Phone: (920) 347-9122
Web: www.nostalgielectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgielectrics.com and fill out the Customer Service Inquiry form and click the Submit button.

A representative will contact you as soon as possible.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgielectrics.com.

This product is not recommended for use outside of North America. The warranty is void if products are exported outside of the USA, Canada or Mexico.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

For more information, visit us online at www.nostalgielectrics.com.

**Like us on Facebook at www.facebook.com/NostalgiaElectrics.
Follow our boards on Pinterest at www.pinterest.com/nostalgielectrx.
Tweet along with us on Twitter at www.twitter.com/NostalgiaElctrx.**

