



All products are trademarks of Nostalgia Products Group, LLC.
Worldwide design & utility patented or patents pending.
© 2014 Nostalgia Products Group, LLC.

www.nostalgiaelectrics.com

(rev. 09/18/14)



CCP310B

Old Fashioned Movie Time Popcorn Cart with Concession Stand

Instructions and Recipes



Make everyday a party!
Visit www.nostalgielectrics.com for more fun products.

CONTENTS

IMPORTANT PRECAUTIONS	3
IMPORTANT SAFEGUARDS	3
INTRODUCTION	4
PARTS & ASSEMBLY	5
HOW TO OPERATE	10
HELPFUL TIPS	11
CLEANING & MAINTENANCE	11
RECIPES	12
RETURNS & WARRANTY	14

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:


120 Volts, 60 Hz
380 Watts, ETL Approved

IMPORTANT PRECAUTIONS

1. NEVER immerse in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth on the appliance.
4. NEVER use a scouring pad on the appliance.
5. NEVER leave appliance unattended while in use.
6. NEVER force Kettle in or out of the brackets as this may cause gears to become misaligned and appliance will not operate properly.
7. Unplug unit from outlet when not in use and during cleaning.
8. DO NOT operate this appliance with a damaged cord or plug, nor if the appliance ever malfunctions.
9. DO NOT clean any parts of this appliance in a dishwasher.
10. Keep out of reach of children.
11. This appliance is NOT A TOY.
12. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
13. Young children should be supervised while in proximity of the appliance to ensure that they do not play with it.

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. **Read all instructions before operating this appliance.**
2.  Keep door of Main Unit closed while operating. Do not touch Kettle while operating; it gets very HOT.
3. To protect against electrical shock do not immerse cord, plug or any part of this appliance in water or other liquids.
4. Close supervision is necessary when any appliance is used near children.
5. Unplug from outlet when not in use, before removing parts and before cleaning.
6. DO NOT operate any appliance with a damaged cord or plug, nor if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair.
7. The manufacturer does not recommend the use of accessory attachments. Use of accessory attachments may cause injuries.
8. DO NOT use outdoors.
9. Position the appliance as close to the outlet as possible to prevent injury due to tripping over cord.
10. DO NOT leave Kettle motor running once popping has ceased.
11. Extreme caution must be used when moving this appliance.

12. DO NOT use the appliance for other than its intended use.
13. An appliance that is plugged into an outlet should not be left unattended while in operation.
14. Check Kettle for presence of foreign objects prior to use.
15. Make sure the Kettle is properly attached to brackets before operating and that the motor plug is plugged into the Kettle.
16. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
17. Longer detachable power supply cords can be used if care is exercised in their use.
18. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
19. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. **If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.**

SAVE THESE INSTRUCTIONS!

INTRODUCTION


Thank you for purchasing the OLD FASHIONED MOVIE TIME POPCORN CART with CONCESSION STAND! This 48" tall vendor-style popcorn cart will be the hit of every party. It yields up to ten cups of hot, fresh, kettle cooked popcorn per batch. The large, stainless steel kettle has a built-in stirring system, resulting in perfectly delicious popcorn every time. This cart has an easy-to-clean design, and a compartment in the base of the unit to store supplies. Your favorite candies can be displayed in the two shelf concession stand. The vintage look and feel will complement any room, and its accessible height makes serving a snap. With the OLD FASHIONED MOVIE TIME POPCORN CART with CONCESSION STAND, popcorn never tasted so good at home!

PARTS & ASSEMBLY


Hardware



#1 Bolt (10mm)
Qty. 10

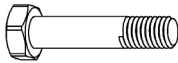

#2 Bolt (38mm)
Qty. 2

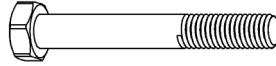

#3 Bolt (60mm)
Qty. 2



#4 Screw (10mm)
Qty. 4



#5 Screw (15mm)
Qty. 2



#6 Flat Washer (6mm)
Qty. 10



#7 Flat Washer (8mm)
Qty. 8



#8 Locking Washer
Qty. 4



#9 Magnet
Qty. 1




#10 Nut Cap
Qty. 2



#11 Nut
Qty. 2



#12 Door Handle
Qty. 1

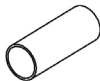


#13 Sleeve Barrel
Qty. 2




#14 Screw (8mm)
Qty. 8


Parts

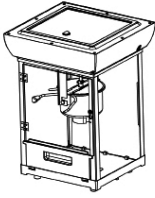


(A) Main Unit

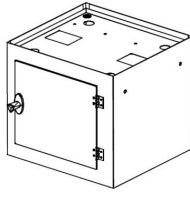

(B) Storage Compartment

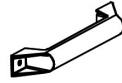


(C) Push Handle

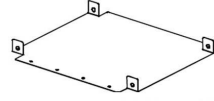


(D) Bottom Plate



(E) Wheel (2)

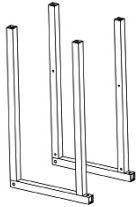


(F) Base Support Qty. 2

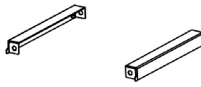


(G) Cross Bar Qty. 2




(H1) Kernel Measuring Cup (2-oz.)

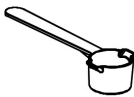

(H2) Oil Measuring Spoon (1 Tbsp.)

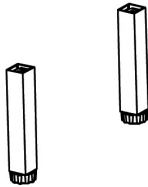

(I) Leg Qty. 2

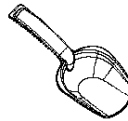


(J) Popcorn Scoop



(K1) Wrench




(K2) Wrench

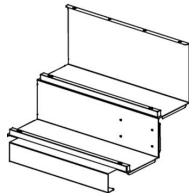


(L) Concession Stand Tiers

Assembly of Storage Compartment with Concession Stand

1. Attach Push Handle (C) from inside Storage Compartment (B) using two #1 Bolts and two #6 Flat Washers. Attach two #11 Nuts to bottom.

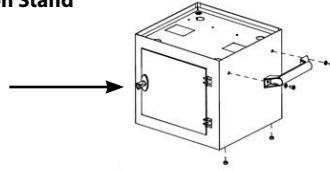


2. Attach Concession Stand Tiers (L) to Storage Compartment (B) using four #14 Screws.
NOTE: Battery for lighted Concession Stand is located on the bottom side of the Concession Stand. When replacing the AA batteries, be sure polarity is correct (i.e. match (+) end of battery to (+) end of battery pack) or steps will not light.

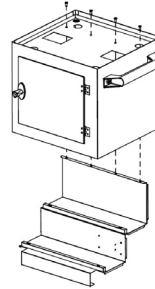


Assembly of Base Support


1. Attach Cross Bar (G) to Base Support (F) and secure with four #1 Bolts and four #6 Flat Washers.

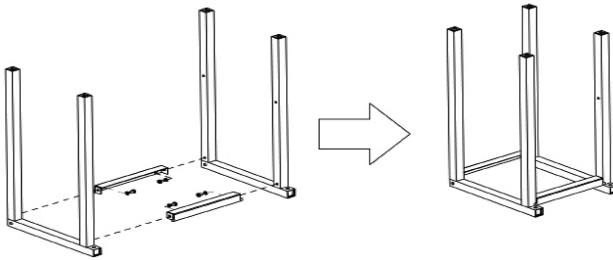

2. Secure Bottom Plate (D) to Base Support (F) using four #1 Bolts and four #6 Flat Washers. Make sure the screw holes on Bottom Plate (D) are to the left of the protruding ends of the Base Support (F) as shown in the diagram below.
3. Attach Legs (I) to protruding ends of Base Support (F) using two #2 Bolts, two #7 Flat Washers and two #8 Locking Washers.

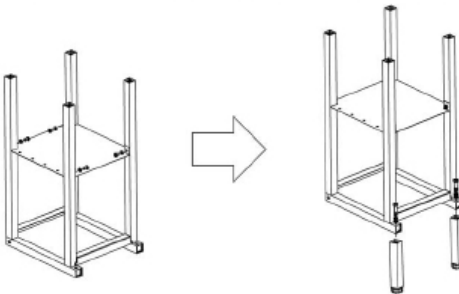


4. Assemble Base Support (F) into the bottom of the Storage Compartment (B) and secure with four #4 Screws.
5. Secure Bottom Plate (D) to Storage Compartment (B) using four #14 Screws.

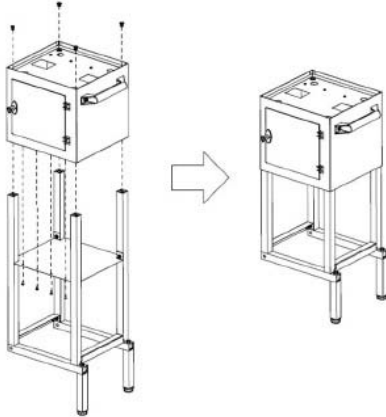


Assembly of Wheels

 
1. Place #7 Flat Washer onto #3 Bolt and insert into pre-drilled hole on inside of Base Support (F).
2. Put #7 Flat Washer and #13 Sleeve Barrel on end of inserted #3 Bolt.
3. Attach the Wheel (E) to the #3 Bolt. Place #7 Flat Washer and #8 Locking Washer on Wheel (E). Use the end of Wrench (K2) with small notch to hold the #3 Bolt in place. While holding #3 Bolt in place, tighten the #10 Nut Cap with Wrench (K1).
4. Repeat on other side, following the directions above.

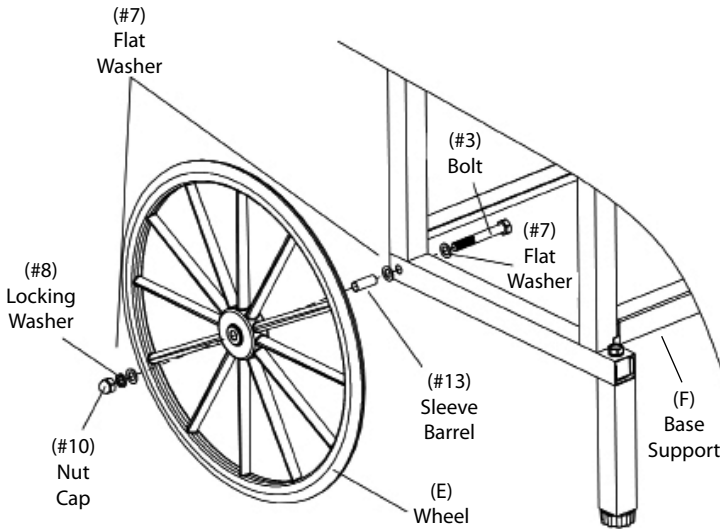


Assembly of Main Unit

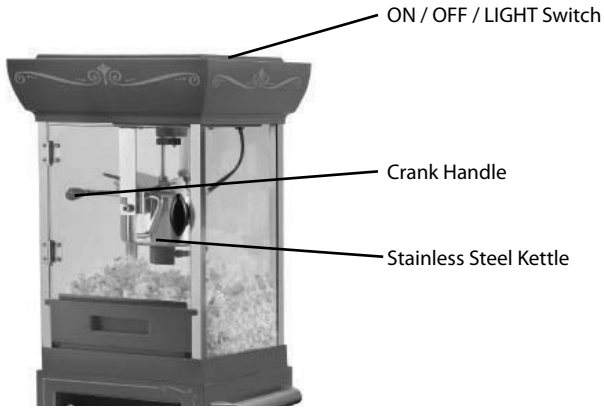

Attaching Door Handle

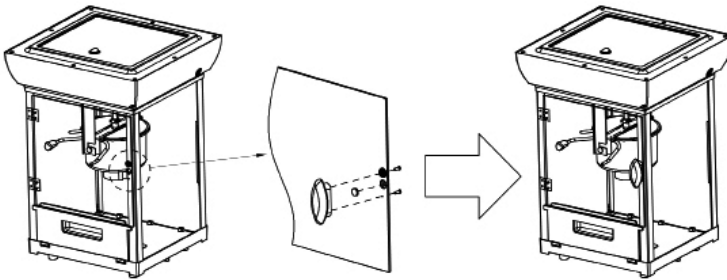

1. Attach #9 Magnet to transparent door of Main Unit (A).
2. Place #12 Door Handle using two #5 Screws.
3. Place Main Unit (A) onto the top of the Storage Compartment (B).
4. Ensure that the two inserting pins at the bottom of the Main Unit (A) line up correctly so that Main Unit (A) can be locked under the beam of the Storage Compartment (C).

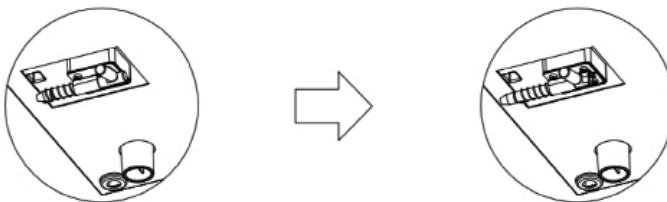

HOW TO OPERATE

Before first use, clean the inside of the unit by wiping with a moist, non-abrasive sponge, towel or cloth and then wipe with a non-abrasive dry towel. Wipe down the inside of the Kettle and be sure it is properly placed in the brackets before starting.

1. First, find a flat surface near an electrical outlet before starting. Make sure your cord is away from any water source. It is acceptable to use an extension cord if needed.
2. Gather your popcorn making supplies: popcorn, seasonings, bowls or bags for holding the popcorn, cooking oil, Kernel Measuring Cup (H1) and Oil Measuring Spoon (H2). (Kernel Measuring Cup and Oil Measuring Spoon are included with your unit.)
3. Plug in the appliance while switch is flipped to OFF position.
4. Make sure Kettle is properly secured in support brackets.
5. Make sure Kettle motor is fully plugged into the outlet located on the bottom side of the kettle. NOTE: Kettle will not heat if plug is not fully inserted.
6. Turn appliance ON by flipping the switch on the top of the machine (see illustration above for location of switches). Allow the appliance to run 3-5 minutes to heat up Kettle.
7. Turn unit OFF.
8. Use the Oil Measuring Spoon (H2) supplied with your OLD FASHIONED MOVIE TIME POPCORN CART with CONCESSION STAND to add 1 tablespoon of your favorite popcorn cooking oil to the Kettle. For best popping results, it is suggested to use vegetable oil.
9. Add popcorn kernels to the Kettle using supplied Kernel Measuring Cup (H1).
NOTE: If you are using pre-measured packages of corn kernels or popcorn making kits, you must still measure out the corn kernels and oil using the supplied Kernel Measuring Cup (H1) and Oil Measuring Spoon (H2). Always follow this rule: 1 Tbsp. oil + 2-oz. popcorn = 8 cups popcorn.
10. Turn the unit ON and close the door. In no time at all, you will hear the popping begin. Fresh, hot popcorn will begin to burst out of the flip lids on the Kettle - just like at the theater!
11. Use your Popcorn Scoop (J) to scoop and serve.

HELPFUL TIPS



NEVER leave the unit unattended while operating.

SMOKING

If your OLD FASHIONED MOVIE TIME POPCORN CART with CONCESSION STAND begins to smoke during cooking, it may be due to grease build up. In order to reduce smoking, make sure that you clean the inside of the Kettle between uses.

POPCORN

For best results, use an all natural soft-shelled popping corn. Organic popping corn is not recommended for use in your OLD FASHIONED MOVIE TIME POPCORN CART with CONCESSION STAND as it has a harder husk and will result in more unpopped kernels.

CLEANING & MAINTENANCE

1. Make sure appliance is unplugged and COMPLETELY COOLED before cleaning. Unplug the outer plug to the outlet as well as the Kettle motor plug inside the Main Unit (A).
2. Use slightly damp, non-abrasive sponge, towel or cloth to wipe down the inside and outside of Main Unit (A), then wipe with a non-abrasive towel to dry.
3. Unplug Kettle motor and remove Kettle from support brackets.
4. Take Kettle out of the Main Unit (A). After removing Kettle from Main Unit (A), fill $\frac{2}{3}$ of Kettle with hot, soapy water.
5. Let the Kettle sit for 15 – 20 minutes to cut the grease. (Time may vary – use your own judgment depending on the amount of cleaning necessary.)
6. Empty water. If necessary, use the scrubber side of a cleaning sponge to scrub inside of Kettle.
7. Rinse inside carefully and dry.
8. Wipe outside of Kettle with damp cloth and dry.

NOTE: To protect the motor plug from getting wet, **never immerse the Kettle in any liquid.** Never place any parts in the dishwasher. Always wash by hand.

RECIPES

The OLD FASHIONED MOVIE TIME POPCORN CART with CONCESSION STAND makes hot, fresh, theater style popcorn every time – anytime!

Enjoy your freshly popped corn in a variety of ways:

- Regular theater style popcorn – add butter and salt.
- Add a pinch of sugar and salt to popcorn for a sweet kettle corn taste.
- Flavored popcorn – add seasoning from any gourmet popcorn seasoning kit.
- Try some of these fun recipes!

NOTE: 1 Gallon = 16 Cups

PARMESAN POPCORN

- 1 Gallon Popped Corn
Pop corn kernels using the OLD FASHIONED MOVIE TIME POPCORN CART with CONCESSION STAND as directed on page 10.
- 1 Tsp. Garlic Powder
Combine garlic powder, green onions, cracked pepper, sea salt and parmesan cheese. Set aside.
- 3 Green Onions, finely chopped
In a large mixing bowl, drizzle heated olive oil over popcorn.
- ½ Tsp. Cracked Pepper
Toss until well coated.
- 1 Tsp. Sea Salt
Slowly add in dry ingredients while continuously stirring popcorn until well coated.
- 1 Cup Parmesan Cheese, grated (more or less to taste)
You may also shake the dry ingredients over popcorn in a large paper or muslin bag.
- 3 Tbsp. Olive Oil, heated

TRADITIONAL POPCORN BALLS

- ½ Cup Unpopped Corn Kernels
Pop corn kernels using the OLD FASHIONED MOVIE TIME POPCORN CART with CONCESSION STAND as directed on page 10.
- ½ Cup Corn Syrup
Mix corn syrup, sugar and salt together in pot and dissolve over medium heat for about 3 minutes.
- ½ Cup Granulated Sugar
Add popcorn to pot, stirring and tossing consistently until popcorn is evenly coated at low heat.
- ½ Tsp. Salt
Remove from heat.
- 1 Stick of Butter, softened
Use softened butter to form balls while popcorn mixture is still warm.
Wrap individual balls in plastic wrap, tie and store at room temperature.

CHUNKY MONKEY

- 1 Gallon Popped Corn
- 1 (12-oz.) Bag Semi-Sweet Chocolate Chips
- 1 (12-oz.) Bag Peanut Butter Morsels
- 1 (4.2-oz.) Bag Banana Chips, broken into small pieces
- 1 (11-oz.) Bag Peanuts

Pop corn kernels using the OLD FASHIONED MOVIE TIME POPCORN CART with CONCESSION STAND as directed on page 10.

Melt chocolate chips and peanut butter morsels over stove, as packaging recommends.

Line cookie sheet with wax paper.

Toss together popcorn and banana chips.

Spread popcorn and banana chip mixture evenly over cookie sheet.

Drizzle melted chocolate and peanut butter mixture over popcorn and banana chips.

Sprinkle peanuts over chocolate and peanut butter mixture.

Allow to cool.

When chocolate and peanut butter has hardened, break up the Chunky Monkey into pieces.

Can be stored in plastic freezer bags.

POPCORN PEPPERMINT BARK

- 1 Gallon Popped Corn
- 1 (12-oz.) Bag Semi-Sweet or Dark Chocolate Chips
- 1¼ cup Peppermint Sticks, crushed

Pop corn kernels using the OLD FASHIONED MOVIE TIME POPCORN CART with CONCESSION STAND as directed on page 10.

Melt chocolate chips over stove, as packaging recommends.

Line cookie sheet with wax paper.

Spread popcorn evenly over cookie sheet.

Drizzle melted chocolate over popcorn.

Sprinkle crushed peppermints over chocolate.

Allow to cool.

When chocolate has hardened, break up Popcorn Peppermint Bark into pieces.

Can be stored in plastic freezer bags.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

OLD FASHIONED MOVIE TIME POPCORN CART with CONCESSION STAND / CCP310B

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685
Customer Service
Phone: (920) 347-9122
Web: www.nostalgielectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgielectrics.com and fill out the Customer Service Inquiry form and click the Submit button.

A representative will contact you as soon as possible.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgielectrics.com.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

For more information, visit us online at www.nostalgielectrics.com.

Like us on Facebook at www.facebook.com/NostalgiaElectrics.

